


# Change-over/Reversing solenoid 12 volt 100 amp intermittent part 0-335-58

#### Connection diagram

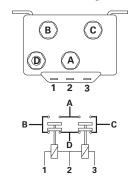

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

## Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:

Contact A

Through motor field to +ve

Contact B/C Contact D

Motor armature -ve supply

Coil Terminal 1/3 Coil Terminal 2


Switched +ve supply -ve supply

Gordon Equipments Limited, England

0-335-58 Leafl

# Change-over/Reversing solenoid 12 volt 100 amp intermittent part 0-335-58

#### Connection diagram

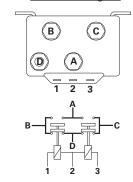

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

## Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:

Contact A

Through motor field to +ve

Contact B/C Contact D

Motor armature -ve supply

Coil Terminal 1/3

Switched +ve supply

Coil Terminal 2


-ve supply

Gordon Equipments Limited, England 0-335-58 Leafl



# Change-over/Reversing solenoid 12 volt 100 amp intermittent part 0-335-58

## Connection diagram

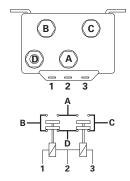

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

## Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be made:

Contact A Contact B/C Through motor field to +ve Motor armature

Contact D

-ve supply


Coil Terminal 1/3

Switched +ve supply

Coil Terminal 2 -ve supply

# Change-over/Reversing solenoid 12 volt 100 amp intermittent part 0-335-58

## Connection diagram

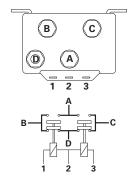

Coil Terminals Energised	Contacts Made
None	B - C - D
1 + 2	A - B and C - D
2 + 3	B - D and A - C
1 + 2 + 3	A - B - C

## Wiring for use as motor reversing solenoid

For use as a motor reversing solenoid the following connections should be

Contact A

Through motor field to +ve Motor armature

Contact B/C Contact D

-ve supply

-ve supply

Coil Terminal 1/3

Switched +ve supply

Coil Terminal 2

0-335-58 Leafl